


**Monstar Order Picker Series**

**150kg**

**Assembly Instructions**

**STEP ONE** Check Contents of your parcel.

- 1 x Backleg
- 1 x Front Stile
- 1 x Bottom Rail
- 2 x Platform braces
- 1 x Platform
- 2 x Top Handrail
- 2 x Rear handrail Post
- 1 x Rear Handrail
- Hardware pack  
(See right)

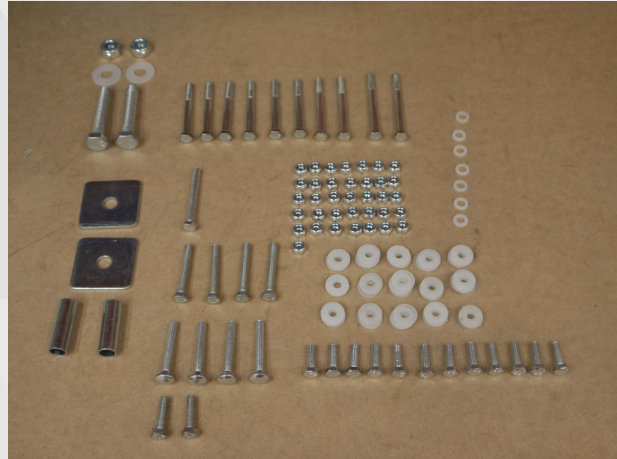

**STEP TWO**

Fit Backleg to Platform

Align hole in the Platform side and hole in the backleg.



Insert M10x60 bolt and D25 washer through platform side.

Fit Square Washer and sleeve between platform side rail and backleg

Fit D25 washer and nyloc nut to bolt.

Do not tighten at this step

Complete other side

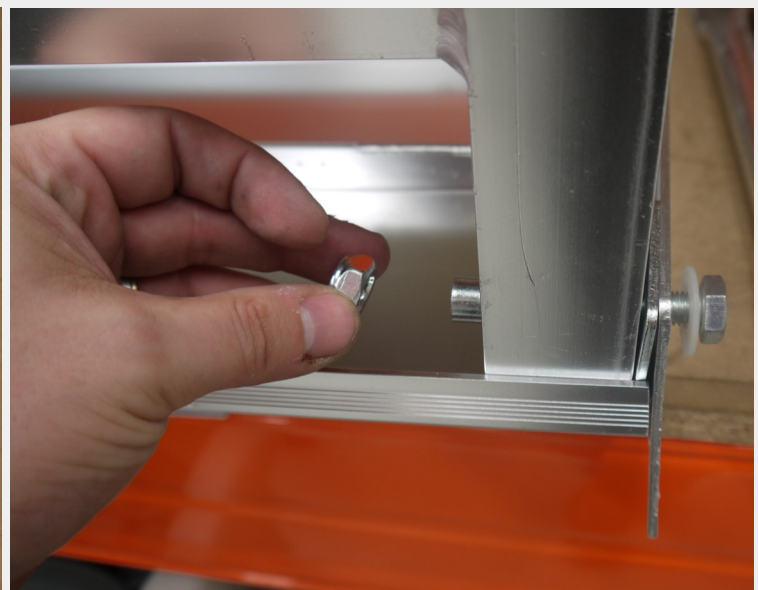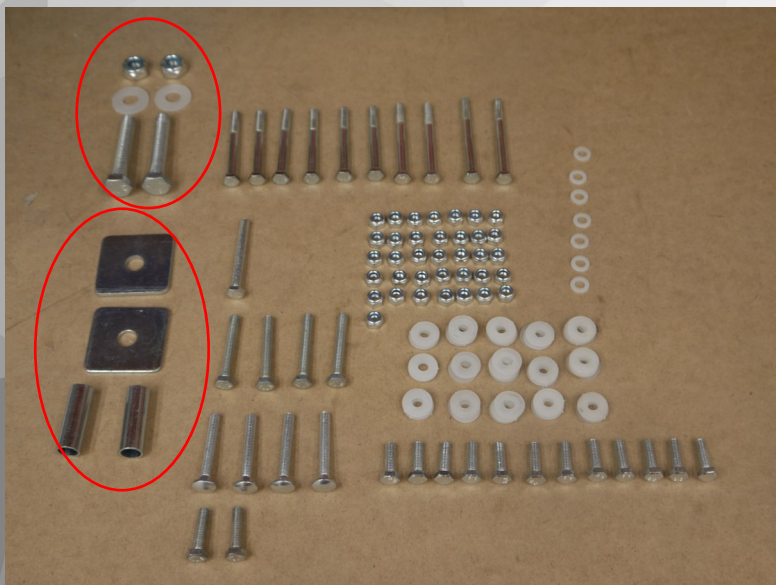

**Monstar Order Picker Series**

**150kg**

**STEP THREE**

Fit Front Stile to Platform

Align holes in the Platform side and hole in Front Stile

Insert M6 x 20 bolt and D18 washer through Platform side and Front Stile  
(Do not do the Front Hole this is done at a later step)

Fit D12 washer and Nyloc Nut—Do not tighten at this step

Complete other side



**STEP FOUR**

Fit Bottom Rail

With Front Stile and Back Leg in position align holes of bottom rail and back leg.

Insert M6x60 bolt and D18 washer through bottom rail and backleg



Fit D18 Washer and Nyloc nut to bolt

Align holes in Bottom Rail and Front Stile

Insert M6x20 bolt and D18 washer through bottom rail and Front Stile

Fit D18 Washer and Nyloc nut to bolt


Complete other side

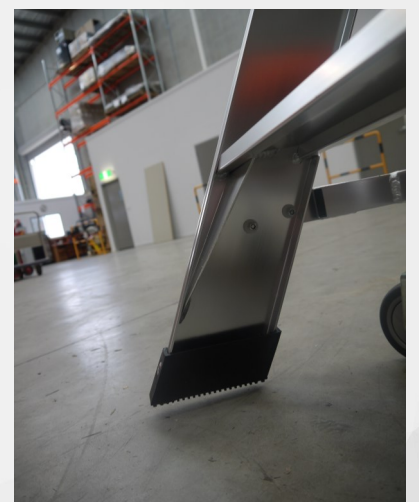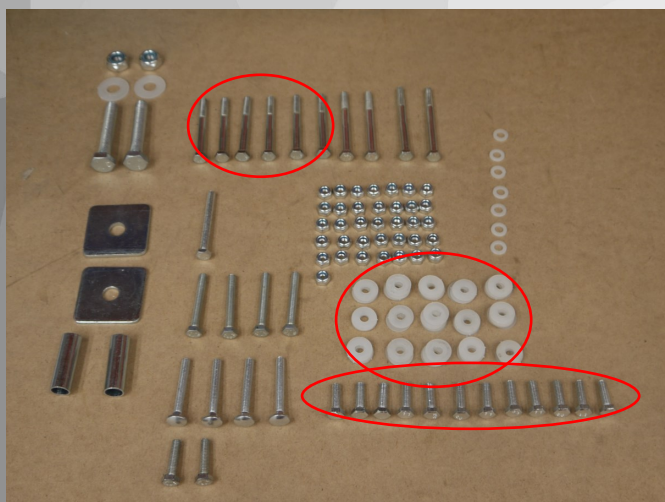

**Monstar Order Picker Series**

**150kg**


- STEP FIVE** Fit Platform Brace Connection  
Align Platform brace with holes in Platform Side and Front Stile  
Insert M6x20 bolt and D18 washer through Brace and Platform Side  
Fit D18 Washer and Nyloc to bolt  
Insert M6x20 bolt and D18 washer through Brace and Front Stile  
Fit Nyloc nut to bolt  
Complete other side

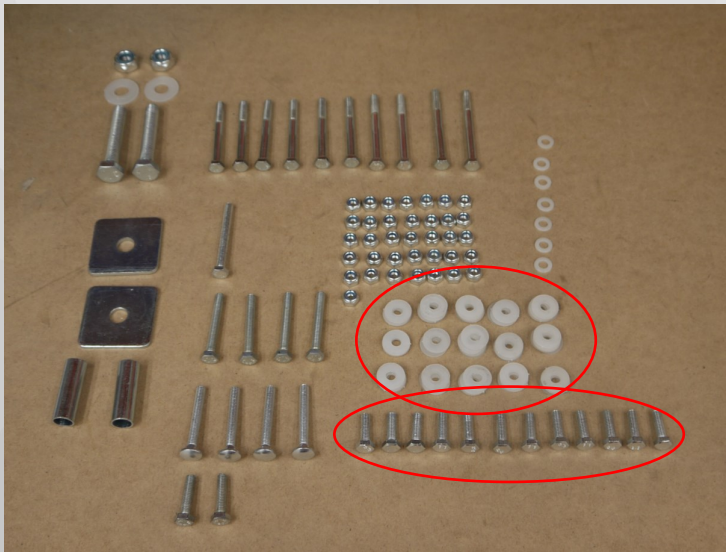

- STEP SIX** Firmly Tighten all nuts and bolts from earlier steps

**Monstar Order Picker Series** **150kg**

- STEP SEVEN** Fit Rear Handrail and Rear Handrail posts  
Align holes in the Platform side, Rear Handrail post and Rear Handrail  
Ensure kickplate is positioned at rear of platform  
Insert M6x70 bolt and D18 washer through Platform Side, Rear Handrail post and Rear Handrail  
Fit D18 Washer any Nyloc nut  
Insert M6x65 bolt and D18 washer through rear handrail post and rear hand-rail  
Fit D18 washer and nyloc nut,  
Insert M6x20 bolt and D18 washer through rear hand rail post and platform  
Fit D18 washer and Nyloc Nut to Bolt  
Complete other side  
Firmly tighten all bolts and nyloc nuts

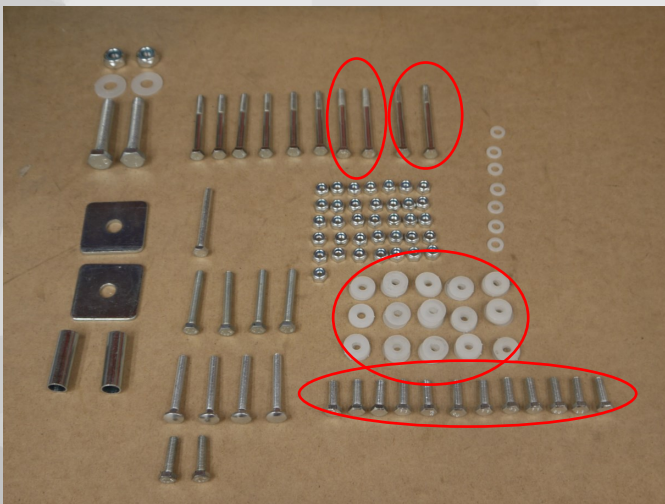

**Monstar Order Picker Series**

**150kg**

**STEP EIGHT** Fit Top Handrail

Align Top Handrail with holes in rear handrail post, platform side and Front Stile

Insert M6x45 bolt and D18 washer through rear handrail post and top handrail (if you are unhappy with the tightness of the fit a second hole can be drilled to put an extra bolt through)

Fit D18 washer and Nyloc nut to bolt

Insert M6x25 bolt and D18 washer through Top Handrail, Platform Side and Front Stile

Fit D12 Washer and Nyloc Nut to bolt

(The following step is not required on 2 and 3 step units)

Insert M6x20 bolt and D18 Washer through Top Handrail and Front Stile

Fit D18 Washer and Nyloc Nut to Bolt

Complete other side

Firmly tighten all nuts and bolts

